





## Kit Toma de Pressão com Mangueira para Pressostato de Ar





Bohrschablone • Drilling pattern • Gabarit de perçage • Dima per la foratura

Climaset® 6555

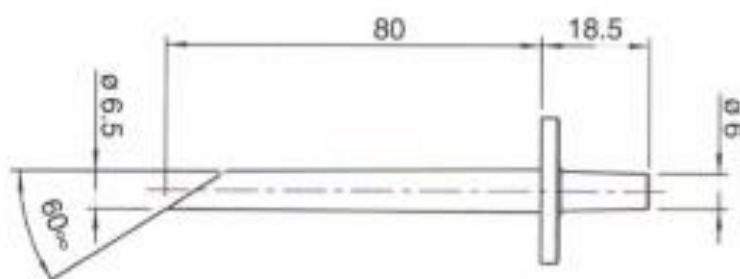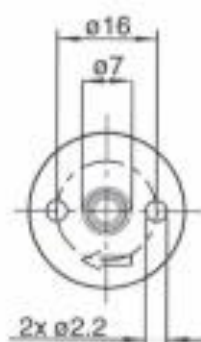


Climaset® 6550

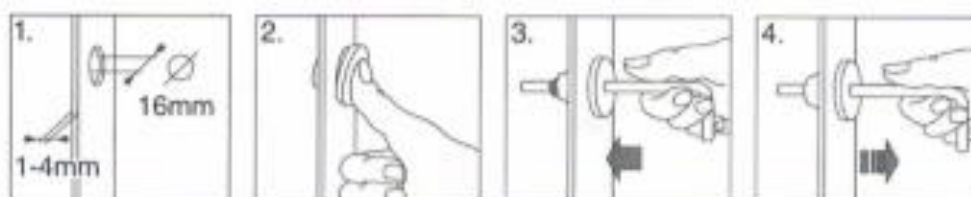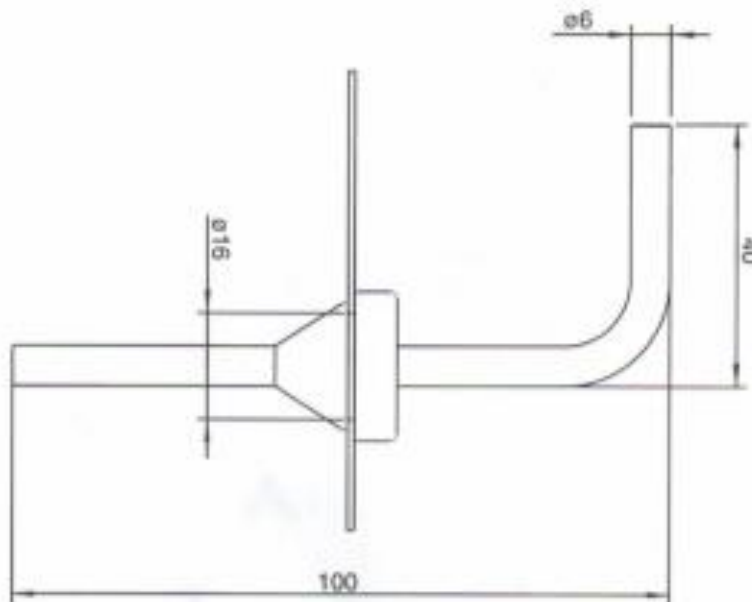



Maße in mm • Dimensions in mm • Dimensions en mm • Dimensioni in mm

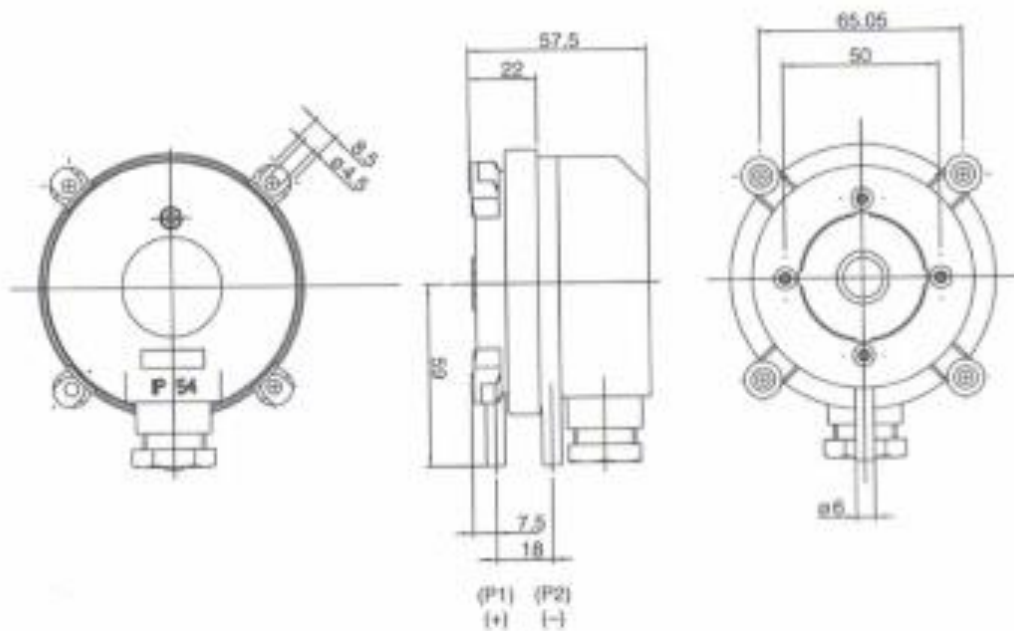

Einbaulage: vorzugsweise vertikal

Installation position: preferably vertical

Position de montage: de préférence verticale

Posizione de montaggio: preferibile la posizione verticale



  
**fricer**

Distribuição de Equipamentos e Acessórios

